



ONO

Bedienungsanleitung

Instructions for use

Mode d'emploi

Istruzioni per l'uso

Gebruiksaanwijzing

Modo de empleo

Manual de instruções

Bruksanvisning

Instruksjonsbok

Instrukcja obsługi

Руководство по эксплуатации

Návod k obsluze

JURA Type 767

de

en

fr

it

nl

es

pt

sv

no

pl


ru

cs

Your ONO

1 Control elements	25
2 For your safety	26
Comply with the instructions for use	26
Proper use	26
User limitations	26
Use by children	27
What to do in the event of damage	27
Preventing damage	27
Danger of electric shock	28
3 Preparing and using for the first time	29
Setting up the machine	29
First-time use	29
4 Preparation	30
The basics of using the ONO	30
Espresso and coffee	31
Permanently setting the amount of water for the cup size	32
5 Daily operation	32
Switching on the machine	32
Filling the water tank	32
Maintenance actions	33
Switching off the machine	33
6 Maintenance	34
Inserting/changing the filter	34
Removing and rinsing the cover	35
Cleaning the machine	35
Descaling the machine	37
Starting cleaning/descaling manually	39
Descaling the water tank	39
Switching the machine from filter mode to descaling mode	39
7 Messages on the symbol display	40
8 Troubleshooting	40
9 Transport and environmentally friendly disposal	41
Transport / Emptying the system / Factory settings	41
Disposal	41
10 Technical data	41
11 Index	42
12 JURA contact details / Legal information	44

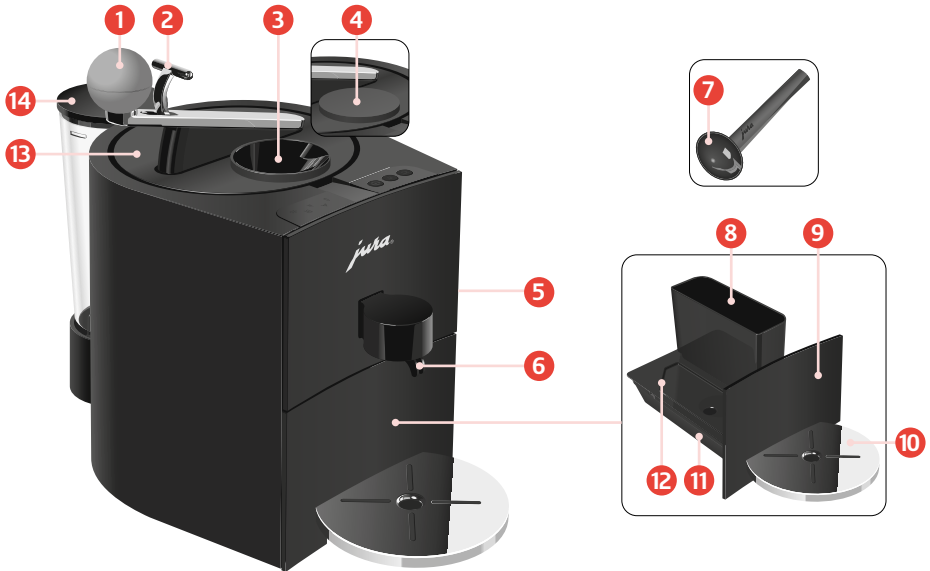

1 Control elements



- 1 Swivel arm
- 2 Release handle
- 3 Powder chute for ground coffee with removable filler funnel
- 4 Cover for powder chute
- 5 Mains cable (back of the machine)
- 6 Coffee spout
- 7 Measuring spoon for ground coffee
- 8 Coffee grounds container
- 9 Front panel
- 10 Cup grille
- 11 Drip tray
- 12 Insert for drip tray
- 13 Cover
- 14 Water tank with cover



Symbol display and buttons

-  Cleaning symbol
-  Descaling symbol
-  Filter symbol
-  Water Tank symbol
-  Drip tray symbol
-  Function button
-  Espresso button
-  Coffee button

de
en
fr
it
nl
es
pt
sv
no
pl
ru
cs

2 For your safety

Comply with the instructions for use

Before using the machine, read these instructions for use thoroughly and completely and comply with the instructions they contain. Keep these instructions for use close to the machine and pass them on to the next user.

Failure to observe the instructions for use may result in serious injuries or damage to property. Safety information is therefore indicated as follows:

⚠ WARNING	Indicates circumstances that may result in serious injuries or death.
⚠ CAUTION	Indicates circumstances that may result in minor injuries.
CAUTION	Indicates circumstances that may result in damage to property.

Proper use

The machine is intended for private domestic use. It is designed solely for the preparation of coffee. Use for any other purpose will be deemed improper.

User limitations

People, including children, who

- do not have the physical, sensory or mental capabilities to use the machine safely or
- are inexperienced or lack knowledge

must be supervised by a responsible person when using it, or must be instructed in how to use it correctly.

When the CLARIS Smart filter cartridge is used, wireless connections are established. Specific details on the frequency band used and the maximum transmission power can be found in the "Technical data" section.

Use by children

Children must be able to recognise and understand the potential dangers arising from incorrect use:

- Keep **children under the age of 8** away from the machine, or supervise them constantly.
- **Children aged 8 and over** may only operate the machine without supervision if they have been instructed in how to use it safely.
- Children may not clean or service the machine unless supervised by a responsible person.
- Do not allow children to play with the machine.

What to do in the event of damage

Never use a damaged machine or mains cable. This could result in fatal electric shock.

- In the event of signs of damage, disconnect the machine from the mains. To do this, remove the mains plug from the power socket.
- Only permit authorised JURA service centres to carry out **repairs to the machine** and the **permanently connected mains cable**. Unsuitable repairs may result in consequential damage.

Preventing damage

To avoid damage to the machine and the mains cable:

- Do not use the ONO or the mains cable near hot surfaces.
- Do not allow the mains cable to rub against sharp edges and ensure that it does not become trapped.
- Never allow the mains cable to hang down loosely. The mains cable could pose a tripping hazard or become damaged.
- Protect the ONO from weather and direct sunlight.

- Only connect the ONO to a mains voltage corresponding to that stated on the rating plate. The rating plate is located on the underside.
- Connect the ONO directly to a domestic power socket. Using multi-socket adapters or extension cords may cause overheating.
- Do not use alkaline or alcohol-based cleaning agents; only use mild cleaning agents and a soft cloth.
- Only fill the water tank with fresh, cold, non-carbonated water.
- Do not use ground coffee treated with additives or ground coffee from caramelised beans.
- Switch the machine off if you are going to be absent for a long period of time. To do this, remove the mains plug from the power socket.
- Only use original JURA maintenance products. Use of products that are not explicitly recommended by JURA could damage your ONO.

Danger of electric shock

Water conducts electricity. Do not bring water and electricity into contact with one another:

- Never touch the mains plug with wet hands.
- Do not immerse the ONO or the mains cable in water.
- Do not put the ONO or any individual parts in the dishwasher.
- Remove the mains plug from the power socket before cleaning. Always wipe the ONO with a damp cloth rather than a wet one, and protect it from prolonged exposure to water splash. The ONO must not be cleaned with a jet of water.
- The ONO is not suitable for installation on a surface where a jet of water can be used.

3 Preparing and using for the first time

Setting up the machine

When setting up your ONO, please note the following:

- Place the ONO on a horizontal surface that is not sensitive to water.
- Choose a spot for your ONO which is protected against overheating.

First-time use

⚠ WARNING



If the machine is operated with a defective mains cable, there is a danger of potentially fatal electric shock.

- ▶ Never use a machine which is damaged or has a defective mains cable.

CAUTION

Milk, sparkling mineral water or other liquids can damage the water tank or the machine.



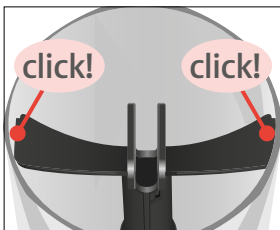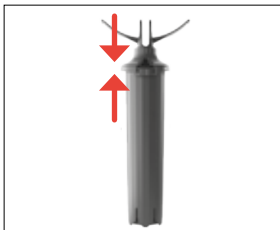


- ▶ Only fill the water tank with fresh, cold water.



- ▶ Insert the mains plug into a power socket.
 - ▶ Press the , or button to switch on the ONO. The and symbols light up.
 - ▶ Remove the water tank and rinse it with cold water.
 - ▶ Fit the filter cartridge extension supplied on top of the CLARIS Smart filter cartridge.
- ▶ Insert the filter cartridge with its extension into the water tank.
 - ▶ Fill the water tank with fresh, cold water and reinsert the tank. The machine automatically detects that you have just inserted the filter cartridge. The symbol and the function button light up.
 - ▶ Press the function button , to confirm that the water tank has been filled. , and flash, the filter is rinsed. Water flows directly into the drip tray. Rinsing of the filter stops automatically. The symbol lights up.

3 Preparing and using for the first time








- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
The  flashes twice to confirm that the filter has been rinsed.
The  and  buttons flash while the ONO heats up.
When  and  light up, the ONO is ready for use.

4 Preparation


The basics of using the ONO

Standby and "ready for use" mode:

As soon as the ONO is connected to the power supply with the mains plug, it goes into standby mode. Press the ,  or  button to switch on the ONO.


When the  or  button lights up, this indicates that the ONO has heated up and is ready for use.

Positions and operation of the swivel arm:

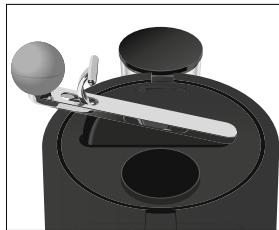



"Fill position"

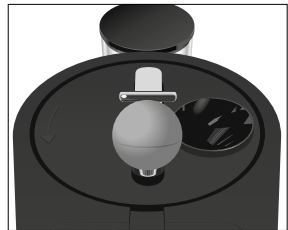This is the position in which ground coffee is added to the filler funnel. When the grinder is not in use, turn the swivel arm to this position.



"Brew position"

In this position, pull the release handle and press the swivel arm down to compress the ground coffee.



-  The swivel arm must only be pressed down in the brew position.
-  Do not move the swivel arm while the pump is operating.

Using ground coffee:

- Only use (freshly) ground coffee, not beans or instant coffee.
- Never add more than two level measuring spoons of ground coffee.

- Very finely ground coffee can block up the system so that the coffee only comes out in drips. If this happens, use more coarsely ground coffee.

Filling the water tank:

If the  symbol appears during preparation, you can fill the water tank and insert it again within 5 minutes. Then press the function button  to confirm.




Coffee preparation will continue.


Espresso and coffee

Example: Coffee

Requirement: The swivel arm is in the fill position.

- ▶ Place a cup under the coffee spout.
- ▶ Remove the cover of the filler funnel.
 - i** The cover for the powder chute protects against dust. Use this cover when not using your ONO for an extended period of time.
- ▶ Add the desired amount of ground coffee to the filler funnel (max. 2 level measuring spoons).
 - i** The amount of ground coffee determines the intensity and aroma of the beverage, so you can adjust it to your personal preferences.

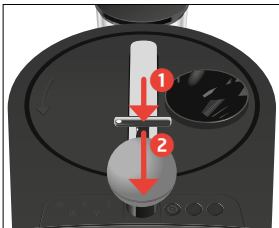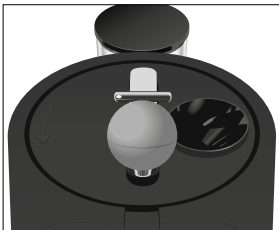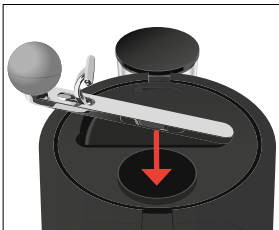

- ▶ Turn the swivel arm to the brew position.
- ▶ Pull the release handle and press the swivel arm down to compress the ground coffee.
- ▶ Release the release handle. The swivel arm is engaged.
- ▶ Press the  button. The preset amount of water for coffee flows into the cup.
 - i** The pressure that builds up while the coffee is brewing may cause the swivel arm to rise slightly and then re-engage in the next notch.

de

en

fr

it

nl

es

pt


sv

no




pl

ru

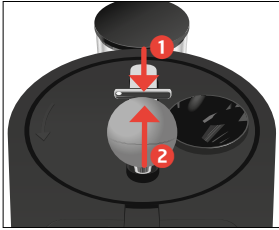cs



Permanently setting the amount of water for the cup size

- i** To stop preparation, press the ,  or  button.
- ▶ Operate the release handle and pull the swivel arm up.
- ▶ Turn the swivel arm to the fill position.
The coffee grounds are automatically transported to the coffee grounds container.



 




It is easy to permanently adjust the amount of water for both speciality coffees to the cup size. This setting only needs to be made once. Every time you prepare a drink in the future, this amount will be dispensed.

What to do: Prepare a speciality coffee as described in the section above, but **keep** the preparation button **pressed** until there is enough coffee in the cup. Then release the button. Preparation stops and the symbol flashes twice as confirmation. The set amount of water is permanently stored.

- i** You can alter this setting at any time by repeating the above procedure.

5 Daily operation

Switching on the machine

- Requirement:** The mains plug is plugged in.
- ▶ Press the ,  or  button to switch on the ONO.
 and  flash while the ONO heats up.
When  and  light up, the ONO is ready for use.

Filling the water tank

Daily maintenance of the machine and hygiene when handling coffee and water are key to a perfect coffee result in the cup every time. You should therefore change the water **daily**.

CAUTION

Milk, sparkling mineral water or other liquids can damage the water tank or the machine.

- ▶ Only fill the water tank with fresh, cold water.
-
- ▶ Remove the water tank and rinse it with cold water.
 - ▶ Fill the water tank with fresh, cold water and reinsert the tank.

Maintenance actions

Optimal coffee quality depends on many factors. One important prerequisite is regular maintenance of your ONO. Carry out the following steps:

Maintenance action	Daily	If necessary	Note
Empty the drip tray and coffee grounds container and rinse with warm water (the drip tray, drip tray insert and coffee grounds container are dishwasher-safe but the front panel and cup grille are not)	■		Always empty the coffee grounds container when the machine is switched on (standby or "ready for use" mode). This is the only way of resetting the coffee grounds counter.
Rinse the water tank	■		
Wipe the surface of the machine with a clean, soft, damp cloth (e.g. microfibre cloth)	■		
Clean the removable filler funnel for ground coffee		■	
Rinse the system		■	Before or after longer periods of non-use, perform a preparation without ground coffee to rinse the system with hot water (remembering to place a container under the spout)
Remove and rinse the cover		■	Always remove and rinse the cover before cleaning (see section 6, "Maintenance – Removing and rinsing the cover")
Clean the inside of the water tank with a brush		■	
Clean the top and bottom of the cup grille		■	

Switching off the machine

5 minutes after the last preparation, the ONO will enter standby mode. To completely disconnect the ONO from the power supply, unplug the mains plug from the power socket.

6 Maintenance

Your ONO has the following integrated maintenance programmes:

- Clean the machine (☼)
- Change the filter (⌚)
- Descale the machine (⚙️)

i If a maintenance programme needs to be started, the appropriate symbol lights up. If this happens, run the appropriate maintenance programme.



Inserting/changing the filter


Once the filter cartridge stops working, the ONO will prompt you to change the filter.







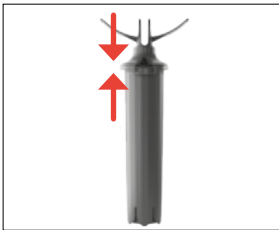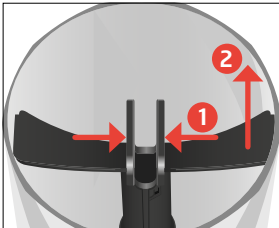

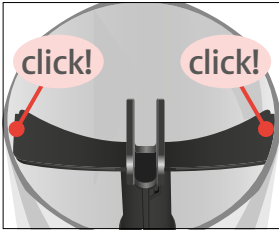- i** If you are using CLARIS Smart filter cartridges, your ONO no longer has to be descaled.
- i** CLARIS Smart filter cartridges are available from specialised dealers.

Requirement: The ONO is ready for use. The filter symbol ⌚ lights up.

- ▶ Press the function button ⏻ for **about 2 seconds**. The ⌚ and ⚙️ buttons light up.
- ▶ Remove and empty the water tank.
- ▶ Remove the used filter cartridge, including the extension, from the water tank.
- ▶ Fit the filter cartridge extension on top of a **new** CLARIS Smart filter cartridge.







- ▶ Insert the filter cartridge with its extension into the water tank.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank. The machine automatically detects that you have just inserted/changed the filter cartridge. The function button  lights up.
- ▶ Press the function button , to confirm that the water tank has been filled. The  symbol lights up.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine. ,  and  flash, the filter is rinsed. Water flows directly into the drip tray. Rinsing of the filter stops automatically. The  symbol lights up.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine. The  flashes twice to confirm that the filter has been rinsed.

Removing and rinsing the cover

Remove and rinse the cover **daily** for the optimal maintenance of your ONO.

- ▶ Remove the mains plug from the power socket.
- ▶ Move the swivel arm to the position shown.

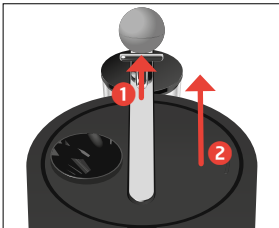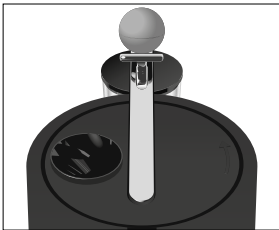

- ▶ Operate the release handle and pull the cover up and off.
- ▶ Rinse the cover under running water.
- ▶ Clean the ONO with a damp cloth.
- ▶ Carefully wipe all parts dry.
- ▶ Refit the cover with the **release handle pulled up**.
- ▶ Release the release handle. The swivel arm is engaged.

Cleaning the machine

After 160 preparations the ONO will prompt you to clean it.

CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.




- ▶ Use only original JURA maintenance products.

i Always remove and rinse the cover **before every** cleaning.


- i** Cleaning takes approximately 15 minutes.
- i** Do not interrupt the cleaning programme. The quality of cleaning will be impaired if you do so.
- i** JURA cleaning tablets are available from specialised dealers.




 

 
Requirement: The ☼ symbol and the function button ⏻ light up. The swivel arm is in the fill position.

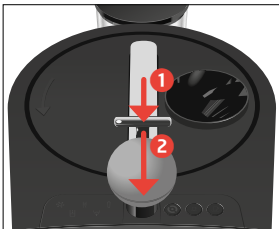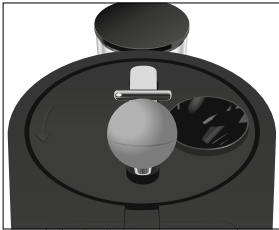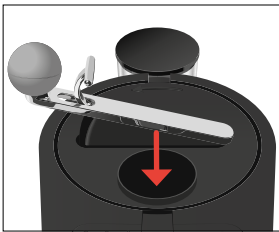- ▶ Press the function button ⏻ for **about 2 seconds**.
The ☼ symbol lights up.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
The ☼ symbol lights up.
- ▶ Fill the water tank and reinsert it.
- ▶ Press the function button ⏻, to confirm that the water tank has been filled.
The ☼ symbol flashes.
- ▶ Insert a JURA cleaning tablet into the filler funnel.

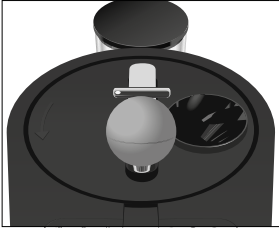

- ▶ Turn the swivel arm to the brew position.
- ▶ Pull the release handle and press the swivel arm down.
- ▶ Release the release handle.
The swivel arm is engaged.
- ▶ Place a container under the coffee spout.
- ▶ Press the function button ⏻.
The cleaning operation starts. ☼, ☼ and ☼ flash, water flows out of the coffee spout several times.
The operation stops automatically. The ☼ symbol flashes, the function button ⏻ lights up.
- ▶ Operate the release handle and pull the swivel arm up.





- ▶ Fully rotate the swivel arm once and return it to the brew position.
- ▶ Pull the release handle and press the swivel arm down.
- ▶ Release the release handle.
The swivel arm is engaged.
- ▶ Place a container under the coffee spout.
- ▶ Press the function button .
- The cleaning operation is continued. ,  and  flash, water flows out of the coffee spout several times.
The operation stops automatically. The  symbol lights up.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
The  symbol flashes twice to confirm that cleaning is complete.



Descaling the machine


The ONO builds up deposits of limescale over time and automatically prompts you to descale it when necessary.









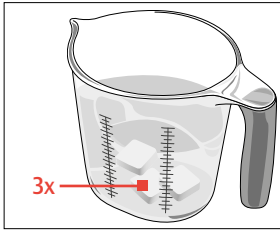












-  If you are using a CLARIS Smart filter cartridge, you will not be prompted to descale.

-
- ⚠ CAUTION** If the descaling agent comes into contact with the skin or eyes, this can cause irritation.
 - ▶ Avoid contact with the skin or eyes.
 - ▶ Rinse off the descaling agent with clean water. Should you get any descaling agent in your eye, see a doctor.
-
- CAUTION** If the wrong descaling agent is used, the machine could be damaged and/or traces could be left behind in the water.
 - ▶ Use only original JURA maintenance products.
-
- CAUTION** If the descaling operation is interrupted, there may be damage to the machine.
 - ▶ Allow the descaling programme to run to the end.
-
- CAUTION** If the descaling agent comes into contact with sensitive surfaces (e.g. marble), it is possible that damage may occur.
 - ▶ Clean up any splashes immediately.

-  Descaling lasts approximately 35 minutes.
-  JURA descaling tablets are available from specialised dealers.

Requirement: The  symbol and the function button  light up.







 

- ▶ Press the function button  for **about 2 seconds**.
The  symbol lights up.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
The  and  symbols light up, the  symbol flashes.
- ▶ Remove and empty the water tank.
- ▶ Completely dissolve 3 JURA descaling tablets in a container holding 500 ml of water. This may take several minutes.
- ▶ Pour the solution into the **empty** water tank and insert it into the machine.
- ▶ Press the function button  to confirm that the descaling solution has been added to the water tank.
The descaling operation starts. ,  and  flash.
The operation stops automatically. The  symbol lights up.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
The descaling operation is continued. ,  and  flash.
The operation stops automatically. The  symbol lights up.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
The  symbol lights up.
- ▶ Remove the water tank and rinse it thoroughly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.
- ▶ Press the function button , to confirm that the water tank has been filled.
The operation is continued. ,  and  flash.
The operation stops automatically. The  symbol lights up.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
The  symbol flashes twice to confirm that descaling is complete.

Starting cleaning/descaling manually

You can also start the cleaning and descaling programmes manually.

- i** If you are using a CLARIS Smart filter cartridge but still need to descale the ONO, first switch the machine to descaling mode (see section 7, "Maintenance – Switching the machine from filter mode to descaling mode").

Requirement: The ONO is ready for use.

- ▶ Press the function button .
 - The  flashes, the  symbol lights up.
- i** The flashing symbol indicates that the maintenance programme has been selected. Press the  or  button to switch between cleaning and descaling.
- ▶ Press the function button  to start cleaning or descaling.
- ▶ Now continue with the second instruction as described under "Cleaning the machine" / "Descaling the machine". Please also note the **guidance** in the relevant section.




Descaling the water tank

Limescale deposits may form in the water tank. To ensure correct function of the machine, descale the water tank from time to time.










- ▶ Remove the water tank.
- ▶ If you are using a CLARIS Smart filter cartridge, remove it.
- ▶ Completely fill the water tank and dissolve 3 JURA descaling tablets in it.
- ▶ Leave the water tank with the descaling solution for several hours (e.g. overnight).
- ▶ Empty the water tank and rinse it thoroughly.
- ▶ If you are using a CLARIS Smart filter cartridge, insert it again.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

Switching the machine from filter mode to descaling mode

Follow the steps below to switch the ONO from filter mode to descaling mode.

- ▶ Remove and empty the water tank.
- ▶ Remove the cartridge with its extension from the water tank.
- ▶ Fill the water tank with fresh water and reinsert the tank.
- ▶ Press the function button .
 - The  symbol lights up and the  symbol flashes three times in quick succession. The machine is now in descaling mode.

7 Messages on the symbol display

Message	Cause/Result	Action
The  symbol lights up.	The water tank is empty.	▶ Fill the water tank (see section 4, "Preparation – The basics of using the ONO / Filling the water tank").
The  symbol lights up.	The coffee grounds container is full. / The drip tray is full. No products can be prepared.	▶ Empty the coffee grounds container and the drip tray (see section 5, "Daily operation – Maintenance actions").
The  symbol flashes.	The coffee grounds container is not inserted correctly or is not inserted at all. No products can be prepared.	▶ Insert the drip tray and the coffee grounds container.
The  symbol lights up.	The filter cartridge no longer works. The ONO is prompting you to change the filter.	▶ Replace the CLARIS Smart filter cartridge (see section 6, "Maintenance – Inserting/changing the filter").
The  symbol lights up.	The ONO is prompting you to clean it.	▶ Clean the machine (see section 6, "Maintenance – Cleaning the machine").
The  symbol lights up.	The ONO is prompting you to descale it.	▶ Descale the machine (See Chapter 6, "Maintenance – Descaling the machine").
The  symbol and the function button  light up.	The filter in the cover may be blocked. / The system needs to be filled.	<ul style="list-style-type: none"> ▶ Remove and clean the cover (see section 6, "Maintenance – Removing and rinsing the cover"). ▶ Fill the water tank and reinsert it. ▶ Press the function button .

8 Troubleshooting

Problem	Cause/Result	Action
Coffee only comes out in drips when it is being prepared.	The coffee is ground too finely and is blocking the system.	▶ Use more coarsely ground coffee.






i If you are unable to solve the problem, contact customer support in your country (see section 12, "JURA contact details / Legal information").



 
 

9 Transport and environmentally friendly disposal

Transport / Emptying the system / Factory settings

Keep the packaging for your ONO. It should be used to protect the machine during transport. In order to protect the ONO from frost during transport, the system must be emptied.

Requirement: The ONO is ready for use.

- ▶ Remove the water tank.
- ▶ Press the function button .
- ▶ Press the  and  buttons simultaneously. When the system is empty,  and  light up.

i Reset the ONO to the **factory settings**: Press the  and  buttons simultaneously for **about 2 seconds**. The ,  and  buttons flash twice to confirm that the machine has been reset to the factory settings.

- ▶ Remove the mains plug from the power socket.

Disposal

Please dispose of old machines in an environmentally friendly way.



Old machines contain valuable, recyclable materials which should be taken to an appropriate disposal centre. Please therefore dispose of old machines via suitable collection systems.

10 Technical data

Voltage	220–240 V ~, 50 Hz
Power	1450 W
Conformity symbol	CE
Pump pressure	static, max. 15 bar
Holding capacity of water tank (without filter)	0.95 l
Holding capacity of coffee grounds container	approx. 6 servings
Cable length	approx. 1.2 m
Weight	approx. 4.75 kg
Dimensions (W × H × D)	24.3 × 32.0 × 46.1 cm
CLARIS Smart filter cartridge (RFID technology)	Frequency band 13.56 MHz Max. transmission power < 1 mW
JURA type	767

11 Index

A

Addresses 44

B

Button 25
 Coffee 25
 Espresso 25
 Function button 25

C

Children 27
CLARIS Smart filter cartridge
 Changing 34
 Inserting 34
Cleaning
 Machine 35
 Starting manually 39
Cleaning (starting manually) 39
Coffee 31
Coffee grounds container 25
Coffee spout 25
Contacts 44
Cover 25
 Removing and rinsing 35
Cup grille 25
Customer support 44

D

Damage
 Preventing damage 27
 What to do in the event of damage 27
Declaration of Conformity 44
Descaling
 Machine 37
 Starting manually 39
 Water tank 39
Descaling mode 39
Display
 Symbol display 25
Display, messages 40
Disposal 41
Drip tray 25

E

Electrical connection
 Technical data 41
Emptying the system 41
Error
 Rectifying faults 40
Espresso 31
EU Declaration of Conformity 44

F

Factory settings 41
Filler funnel
 Filler funnel for ground coffee 25
Filling
 Water tank 32
Filter
 Changing 34
 Disabling 39
 Inserting 34
First-time use 29
Function button 25

G

Ground coffee
 Measuring spoon for ground coffee 25

H

Hotline 44

J

JURA
 Contacts 44

M

Machine
 Cleaning 35
 Cleaning (starting manually) 39
 Descaling 37
 Descaling (starting manually) 39
 Switching off 33
 Switching on 32
Mains cable 25
Maintenance 34
Maintenance actions 33
Measuring spoon for ground coffee 25
Messages on the symbol display 40

P

- Permanently setting the amount of water for the cup size 32
- Preparation 30
 - Coffee 31
 - Espresso 31
- Problems
 - Rectifying faults 40
- Proper use 26

R

- Rectifying faults 40
- Release handle 25
- RFID 41

S

- Safety information 26
- Switching off 33
- Switching on 32
- Swivel arm 25
- Symbol
 - Cleaning 25
 - Descaling 25
 - Drip tray 25
 - Filter 25
 - Water tank 25
- Symbol description 26
- Symbol display 25

T

- Technical data 41
- Telephone 44
- Transport 41

U

- Use, first-time 29
- Users 26

W

- Water tank 25
 - Descaling 39
 - Filling 32
- Wireless connection 34, 41

de

en

fr

it

nl

es

pt

sv

no

pl

ru

cs

12 JURA contact details / Legal information

JURA Elektroapparate AG
Kaffeeweltstrasse 10
4626 Niederbuchsiten,
Switzerland
Tel. +41 (0)62 38 98 233

- i** You can find additional contact details for your country at **jura.com**.
- i** If you need assistance with using your machine, you can find this at **jura.com/service**.
- i** Your opinion is important to us! Use the contact details at **jura.com**.

Directives The machine complies with the following directives:

- 2014/35/EU – Low Voltage Directive
- 2014/30/EU – Electromagnetic Compatibility
- 2009/125/EC – Ecodesign Directive
- 2011/65/EU – RoHS Directive
- 2014/53/EU – Wireless Voltage Directive

A detailed EU Declaration of Conformity for the ONO can be found at **jura.com/conformity**.

Technical changes We reserve the right to make technical changes. The diagrams used in these instructions for use are for illustration purposes only and do not represent the original colours of the machine. Some details of your ONO may vary.

